

DATE OF PURCHASE:

31/5-1935

SUPPLIER'S STAMP:


Guarantee 01327

This Tecla Pocket Radio, the serial number of which you will find on the back of this booklet, carries a 6 months' guarantee as from the date of purchase. This guarantee only holds good for normal use. It becomes inoperative in the case of apparatus which have been damaged through having been dropped or knocked, or through some other outside agency, through the battery (batteries) having been wrongly fitted, through improper use or through having been exposed to excessive warmth.

TECLA RADIO INDUSTRIE EN HANDELSONDERNEMING | AMSTERDAM | HOLLAND | 314 N.Z. VOORBURGWAL

Directions for use

The Tecla Pocket Radio is very simple to operate. Even so, there are a few points to which we would like to draw your attention, so as to enable you to derive the fullest benefit from your new acquisition. First of all, you should know that the Tecla Pocket Radio has a built-in

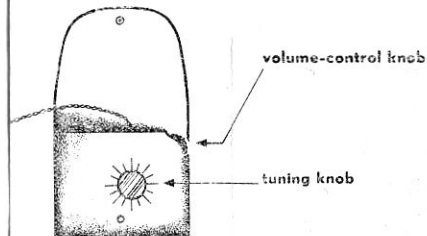

directional aerial which is fitted along one of the long sides. For the best possible reception, the apparatus should be placed so that one or the other of the long sides faces the transmitter. A brief experiment will show you the right direction.

The best results are obtained by placing the Tecla Pocket Radio in a horizontal position, i.e. with one of the long sides parallel to the earth's surface. Placing the apparatus on one of its short sides, or holding it at a slant, will diminish the volume.

The volume-control knob which also serves as a switch, and the tuning knob are shown on the illustration. The apparatus is set going at once by turning the volume-control knob to the right.

With many users of the Tecla Pocket Radio, the little ear-piece will fit snugly in the ear. This may, however, not be the case with you. In that case we advise you to buy a plastic part which may be fitted to the little ear-piece by means of a simple snap-fastener. These parts are obtainable very cheaply from any dealer in hearing aids. When the little ear-piece does not fit at once, you may even have a little part made to measure from a wax-print of your ear.

The Tecla Pocket Radio has two batteries. The smaller one (1.5 V.) has a life of 15 hours', the larger one (22.5 V.) of 225 hours' continuous

operation, and in practice it will last for at least six months. The two batteries should always be fitted properly, the + sign on the battery corresponding with the + sign in the plastic case.

To replace the batteries, the apparatus should be removed from its case. First remove the tuning knob by pulling it straight forward which will allow the apparatus to be conveniently lifted out of its case. By opening the lid of the apparatus, the batteries are exposed. In the majority of cases, only the small 1.5 V. pencil-battery will need renewal. Take care to make the + sign on the battery correspond with the + sign in the plastic case. A ridge between the two batteries will prevent them being changed about. Now, close the lid and put the apparatus back into its case. The tuning knob which tightly fits the grooves of the spindle, can simply be pushed back into place.

Never put the apparatus on top of a stove or on the central heating. Excessive warmth is fatal for the plastic case.

If you use your Tecla Pocket Radio



sensibly and in accordance with these directions, it will give you life-long pleasure. Time and again you will meet situations where your Tecla Pocket Radio will prove a valuable asset.

We wish you much pleasure from your new acquisition!